


SMARTair[®] System overview – Update on Card



SMARTair devices

• Automatic read-out of audit trails

- Low battery alert report
- Wall-Updater: TCP/IP connection to database, Read & Write functionality with
- base, Read & Write functionality with 13.56Mhz credentials

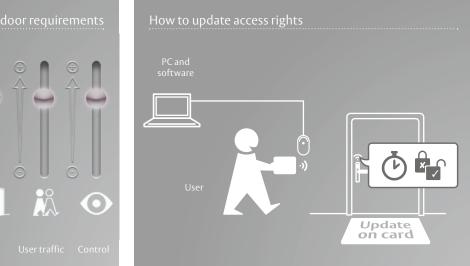

Wall updater

User credentials