

Application:

The SMARTair Wireless HUB receives information about changes and updates from the SMARTair software and transmits it to the SMARTair Wireless escutcheons, wall readers and knob cylinders.

Audit trail details are sent in the reverse direction, from the SMARTair escutcheons, wall reader and knob cylinders to the software.


Function

The SMARTair Wireless HUB is the link between SMARTair Software (TS1000) and the RF module in the SMARTair Wireless escutcheons, wall readers and knob cylinders.

Features

Up to 100 HUBs in one system

Up to 30 escutcheons/wall readers can communicate with one hub

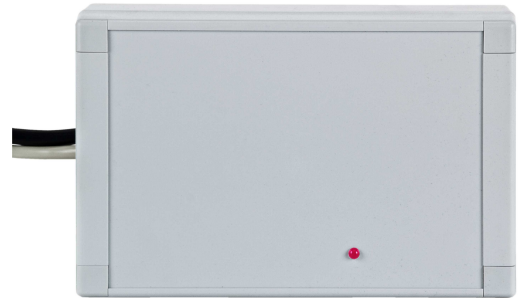

Specification:

RF Module frequency: 868 MHz or 915 MHz

TCP/IP connection to the PC network. Default details:

IP address - 192.168.1.10; Subnet mask - 255.255.255.0;

Gateway - 192.168.1.0

Operating temperature: from 0°C to 60°C

Humidity: 10%-90%, no condensing

Power: 12 VDC or 230/110 VAC

Variants:

Code	Description
1046250000	SA WIRELESS HUB :STWIRELESSHUB2